



CONFIDENTIAL

KOBA VISION

Vocatex Standard
Vocatex Plus

Technical Manual

Service menu

KOBA Vision Vocatex has a service menu. The service menu is intended to adjust the parameters of the Vocatex to the specific needs of the customer.



WARNING

Do not give this manual or inform a customer about the menu. The menu is only for dealers.

Navigation

To access the service menu, press and hold:

1. The **zoom knob**.
2. **Colour button**
(while holding the zoom knob).

After a few seconds, the service menu will appear.

Navigation: Rotate the zoom knob

Left: Previous item

Right: Next item

Confirm: Press the **Colour button**

Structure

- *for experts. Do not change these settings unless you know exactly what you are doing. KOBA Vision will not provide support for these settings.
- The menu will show messages in grey and white
 - Grey: not accessible
 - White: accessible

Menu	Submenu 1	Submenu 2	Description	Procedure to save	
Frontpanel	Info	Software Info	Displays software version	-	
		Image Version	Displays image version	-	
		Reading Voice Cnt	Displays how many voices are installed	-	
		Back	-	-	
	SW2 Function	Hardware Info		No access	-
		HDMI Info		No access	-
		CEC Info		No access	-
		Back		-	-
		Toggle HDMI Input		By pressing button 2 of the frontpanel, the Vocatex will toggle between the HDMI 1 and the HDMI 2 input of the screen	Save configuration
		Factory Settings		By pressing button 2 of the frontpanel, the Vocatex will go back to factory settings	Save configuration
SW3 Function	Brightn BackGr ()		Select to make function brightness/background available under button 3. Select → (X), unselect → ()	Save configuration	
	Lighting ()		Select to make function lighting available under button 3. Select → (X), unselect → ()	Save configuration	
	Line ()		Select to make function line available under button 3. Select → (X), unselect → ()	Save configuration	
	Bar ()		Select to make function bar available under button 3. Select → (X), unselect → ()	Save configuration	
	Back		-	-	
	Overview Zoom		By pressing button 6 of the frontpanel, the Vocatex will go to overview mode and back to magnification	Save configuration	
SW6 Function	Start Stop Reading		By pressing button 6 of the frontpanel, the Vocatex will start or stop reading	Save configuration	
	Toggle HDMI Input		By pressing button 6 of the frontpanel, the Vocatex will toggle between the HDMI 1 and the HDMI 2 input of the screen	Save configuration	
	Factory Settings		By pressing button 6 of the frontpanel, the Vocatex will go back to factory settings	Save configuration	
	Overview Zoom		By pushing the footswitch, the Vocatex will go to overview mode and back to magnification	Save configuration	
	Start Stop Reading		By pushing the footswitch, the Vocatex will start or stop reading	Save configuration	
	Toggle HDMI Input		By pushing the footswitch, the Vocatex will toggle between the HDMI 1 and the HDMI 2 input of the screen	Save configuration	

All colors	No Yes	Possibility to select the colors individually Turns the full color list on	-
Backg Color List	BlackWhite ()	Select to make black/white and white/black available in the color list by pressing and hold button 4. Select → (X), unselect → ()	Save configuration
	BlackRed ()	Select to make black/red and red/black available in the color list by pressing and hold button 4. Select → (X), unselect → ()	Save configuration
	BlackGreen ()	Select to make black/green and green/black available in the color list by pressing and hold button 4. Select → (X), unselect → ()	Save configuration
	BlackBlue ()	Select to make black/blue and blue/black available in the color list by pressing and hold button 4. Select → (X), unselect → ()	Save configuration
	BlackCyan ()	Select to make black/cyan and cyan/black available in the color list by pressing and hold button 4. Select → (X), unselect → ()	Save configuration
	BlackYellow ()	Select to make black/yellow and yellow/black available in the color list by pressing and hold button 4. Select → (X), unselect → ()	Save configuration
	BlackMagenta ()	Select to make black/magenta and magenta/black available in the color list by pressing and hold button 4. Select → (X), unselect → ()	Save configuration
	BlackOrange ()	Select to make black/orange and orange/black available in the color list by pressing and hold button 4. Select → (X), unselect → ()	Save configuration
	BlackGray ()	Select to make black/gray and gray/black available in the color list by pressing and hold button 4. Select → (X), unselect → ()	Save configuration
	BlueYellow ()	Select to make blue/yellow and yellow/blue available in the color list by pressing and hold button 4. Select → (X), unselect → ()	Save configuration
	BlueWhite ()	Select to make blue/white and white/blue available in the color list by pressing and hold button 4. Select → (X), unselect → ()	Save configuration
	RedWhite ()	Select to make red/white and white/red available in the color list by pressing and hold button 4. Select → (X), unselect → ()	Save configuration
	OrangeWhite ()	Select to make orange/white and white/orange available in the color list by pressing and hold button 4. Select → (X), unselect → ()	Save configuration

				<p>Select → (X), unselect → ()</p> <p>Select to make green/white and white/green available in the color list by pressing and hold button 4.</p> <p>Select → (X), unselect → ()</p>	Save configuration
		GreenWhite ()			-
		Back			Save factory settings
	Lighting			Changes the brightness of the document lights and frontpanel lights	
	FPanel Illumin			Changes the brightness of the frontpanel lights only	Save configuration
	Back				-
	Video			Changes the contrast	Save factory settings
	Brightness			Changes the brightness	Save factory settings
	Colour Saturation			Changes the colour saturation	Save factory settings
	Background			Changes the background	Save factory settings
	Line Width			Changes the width of the line available under button 3 if selected in "Frontpanel" – "SW3 Function"	Save configuration
	Bar Brightness			Changes the brightness of the bar available under button 3 if selected in "Frontpanel" – "SW3 Function"	Save configuration
	Bar Transparency			Changes the transparency of the bar available under button 3 if selected in "Frontpanel" – "SW3 Function"	Save configuration
	Back				-
	Reading			Select not run the language and voice wizard during the next start up	Save configuration
	Run Init Wizard	No		Select to run the language and voice wizard during the next start up	Save configuration
		Yes			
	Motion Control	None		During reading, the camera image is real-time. The Vocatex will not detect document movement. The Vocatex will not update the reading box. (Vocatex 1)	Save configuration
		FreezeFrame		During reading, the camera image is frozen.	Save configuration
		StichOnMatch		During reading, the camera image is real-time. The Vocatex will detect document movement. The Vocatex will update the reading box if it finds a match with the last position.	Save configuration
		StichAlways		During reading, the camera image is real-time. The Vocatex will detect document movement. The Vocatex will update the reading box if it finds a match with the last position. If a match isn't found, the Vocatex will automatically perform a new start reading operation. (displays a triangle left of the progress indicator)	Save configuration
	Voice Assistance	Off		Select to turn the talking button messages off	Save configuration

	On	Select to turn the talking button messages on	Save configuration
Back		-	-
Reading Graphics			
Column Selector	Off	Select to turn the column selector off	Save configuration
	On	Select to turn the column selector on	Save configuration
Col Select Color	Red	Changes the color of the column selector to red	Save configuration
	Green	Changes the color of the column selector to green	Save configuration
	Cyan	Changes the color of the column selector to cyan	Save configuration
	Yellow	Changes the color of the column selector to yellow	Save configuration
	Magenta	Changes the color of the column selector to magenta	Save configuration
	Orange	Changes the color of the column selector to orange	Save configuration
	BlackOrWhite	Changes the color of the column selector to black (colormode or white background/black letters) or white (black background/white letters)	Save configuration
Box Thickness		Changes the thickness of the reading box (0 = off)	Save configuration
Hor Line Thickness		Changes the thickness of the horizontal line (0 = off)	Save configuration
Triangle Height		Changes the height of the triangle of the column selector (0 = off)	Save configuration
Col Select Thickness		Changes the thickness of the column selector (0 = off)	Save configuration
PI Mode	None	Displays no progress indicator	Save configuration
	Top	Displays the progress indicator on top of the screen	Save configuration
	Bottom	Displays the progress indicator on the bottom of the screen	Save configuration
PI Border Thickness		Changes the border thickness of the progress indicator (0 = off)	Save configuration
PI Height		Changes the height of the progress indicator	Save configuration
Back		-	-
Tech			
Camera			
Cam Rgain		Colour adjustment of the camera	Save configuration
Cam Bgain		Colour adjustment of the camera	Save configuration
Nbr of Zoom Steps		Changes the number of steps the zoom range is divided in	Save configuration
Default Zoom Pos		Changes the zoom position during start up	Save configuration
Perman Autofocus	Off	Sets off the permanent autofocus	Save configuration
	On	Sets on the permanent autofocus	Save configuration
Video Mode	720p	Sets the camera resolution to progressive scan 1280x720 (first startup takes about 5 minutes with blinking lights to program the unit)	Save configuration

	1080i	Sets the camera resolution to interlaced 1920x1080 (first start up takes about 5 minutes with blinking lights to program the unit)	Save configuration
Save For Bootup	No	Select not to save the new default zoom position	-
	Yes	Select to save the new default zoom position	-
Back		-	-
HDMI			
HDMI/DVI	Auto	Detects automatically if the screen has a HDMI or DVI input	Save configuration
	HDMI	Sets the output to HDMI (video and sound)	Save configuration
	DVI	Sets the output to DVI (only video)	Save configuration
HDMI Color Space	Auto	Detects automatically the color space	Save configuration
	YUV444	Changes the color space to YUV444	Save configuration
	YUV422	Changes the color space to YUV422	Save configuration
	RGB	Changes the color space to RGB	Save configuration
HDMI Scanning	No Data	Preset of the screen is used to display the image	Save configuration
	OverScan	Extra image area around the four edges of the image are shown	Save configuration
	UnderScan	No extra image area around the four edges of the image are shown	Save configuration
HDMI Width		Changes the image resolution in the width	Save configuration
HDMI Height		Changes the image resolution in the height	Save configuration
CEC	Off	CEC (communication between Vocatex – screen) off	Save configuration
	On	CEC (communication between Vocatex – screen) on	Save configuration
TV Auto Power	No	The Vocatex will not turn off the screen when turning off the Vocatex	Save configuration
	Yes	If available on the screen, the Vocatex will automatically turn off the screen when turning off the Vocatex	Save configuration
Back		-	-
Load/Save			
Load factory setgs		Loads the current factory settings	-
Def. factory setgs		Loads the default factory settings	-
Save factory setgs		Save the current settings as factory settings	-
Load config.		Loads the current configuration	-
Default config.		Loads the default configuration	-
Save config.		Save the current configuration	-
Reset Init Wizard		Resets the languages and voice menu	-
Back		-	-
Back		-	-

Load/Save

When loading and saving the settings of the Vocatex, a distinction is made between the "Factory settings" and the "Configuration".

When modifying and saving a setting, take care to check above whether this setting is part of the "Factory settings" or the "Configuration".

Factory settings

The factory settings are the settings that are applied when the reset button on the interface of the Vocatex is pushed. These settings include contrast, brightness, magnification, help, background level, colour, ...

It can be useful to adapt the factory settings specifically for a customer:

- To load and apply the current factory settings, select "Load factory setgs."
- To apply the default factory settings, select "Def. fact. setgs."
- To save the current settings as factory settings, select "Save factory setgs."

Modifying the factory settings for a specific customer

When adapting a Vocatex to the needs of a specific customer, follow the following steps:

- Apply the default factory settings (Def. fact. setgs. → Yes). That gives you a clearly defined situation to start from.
- Modify the Vocatex's settings to fit the needs of the customer. You can modify these settings:
 - Through the specific buttons on the interface (brightness, magnification, ...).
 - Through the service menu. This can be necessary when a setting is not available on the interface.
- Save the current settings as factory settings: Save factory setgs. → Yes

Loading and saving configuration

The configuration includes the settings of the internal working of the Vocatex, for example: led intensity, connection settings, camera settings, CEC, Logo, ...

These settings can be controlled through the Load/Save menu:

- To load and apply the current configuration, select "Load config."
- To apply the default configuration, select "Default config."
- To save the current settings as configuration, select "Save config."

When the default configuration is applied, the default factory settings are applied as well. This menu item will set all the Vocatex's settings back to its defaults.

When the default configuration is applied, it is not yet saved as configuration. To apply the default configuration permanently, follow these steps:

- Apply the default configuration: Default config. → Yes
- Save the current settings as configuration: Save config → Yes

Resolution X/Y *

The default resolution of the HD system's video output is 1280 x 720 pixels. This represents a 16:9 aspect ratio.

When this video format is shown on a 16:10 display, the image will be stretched vertically and the aspect the image is deformed. This can be annoying in some situations.

SERVICE MENU

With the "Resolution X" and "Resolution Y" settings in the service menu, it is possible to have the Vocatex output a different resolution that matches the aspect ratio of the display better.

Changing the resolution of the video signal should be done with extreme care, as an incorrect setting might corrupt the display. Changing the resolution is for experts only.

Some notes:

- To display a 16:9 image on a 16:10 display without stretching our black bars, the horizontal resolution of the output signal should be reduced.
- For a 16:10 display, the theoretical ideal resolution would be 1152x720 pixels. However, to have a perfect aspect ratio, the horizontal resolution might need to be slightly different. Therefore, it is advisable to verify the correct aspect ratio by measuring the height and width of a coin on the display.
- Most computer displays will show the resolution of the current input signal in their menu.
- When changing the resolution of the output in the service menu, the result on the display might not be immediately correctly visible. Therefore it is advised to turn the display off and on again after a resolution change to see the full effect.
- Koba Vision does not guarantee that changing the Vocatex's output resolution will lead to good results on any type of display. It has been found to work properly for the following display types:
 - Samsung 206BW
 - Samsung 226BW
 - Samsung Syncmaster 940BF
 - LG L194WT
 - Acer AL1951

CEC Type

To use the Vocatex with a LG display, change the default to LG Simplink.

© 2011 Koba Vision
De Oude Hoeven 6 • 3971 LEOPOLDSBURG • België
Tel. +32 11 51 70 80 • Fax +32 11 51 70 85
info@kobavision.be
<http://www.kobavision.be>
